


MASS-VIEW hook-up diagram

Meter or Meter with needle valve

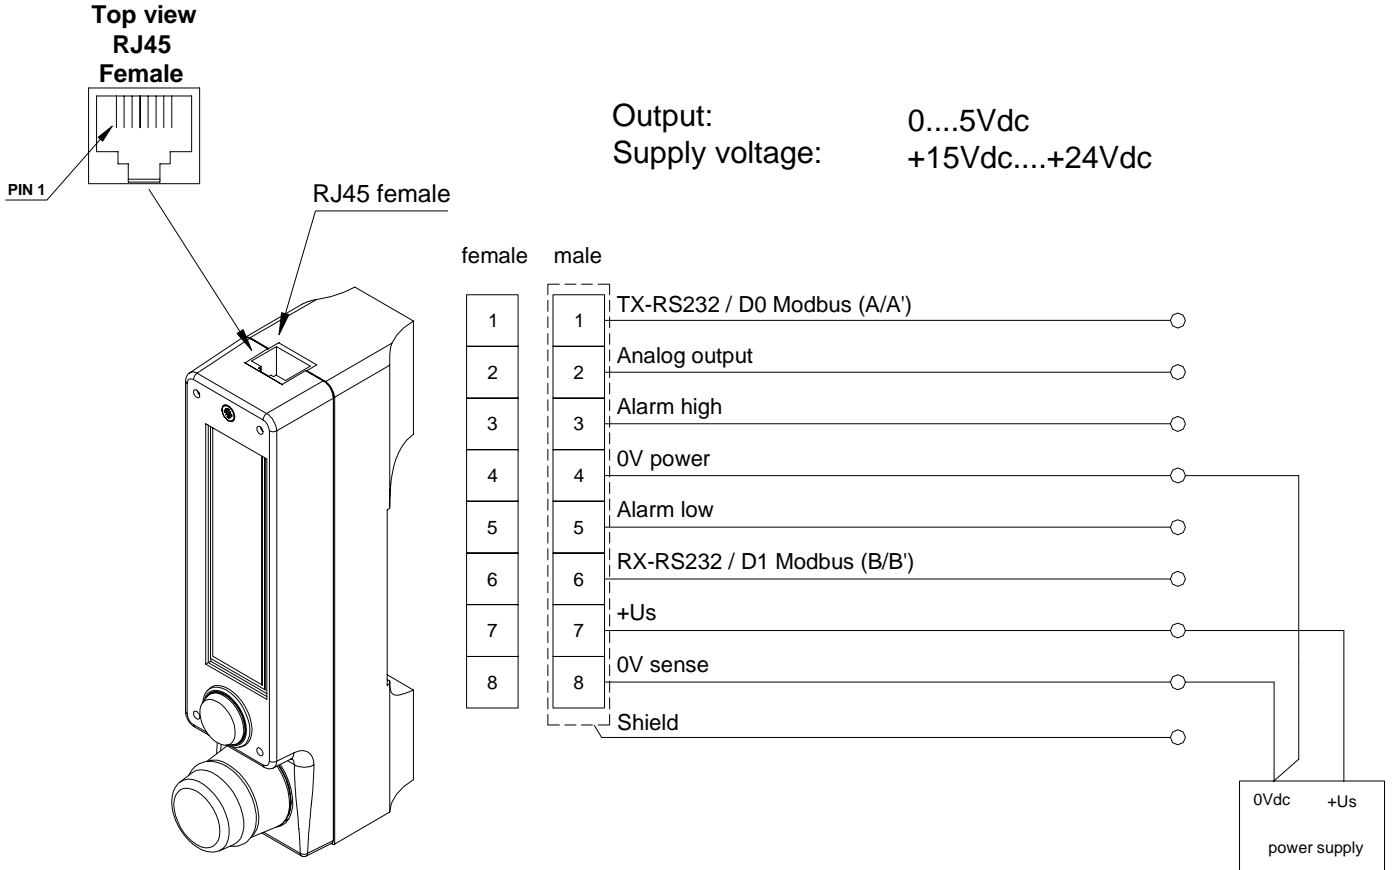

Note :
 0V power (pin 4) and 0V sense (pin 8) should be separately connected to the 0V terminal at the power supply.